



ASSEMBLY INSTRUCTION




MEDFORD CHAIR


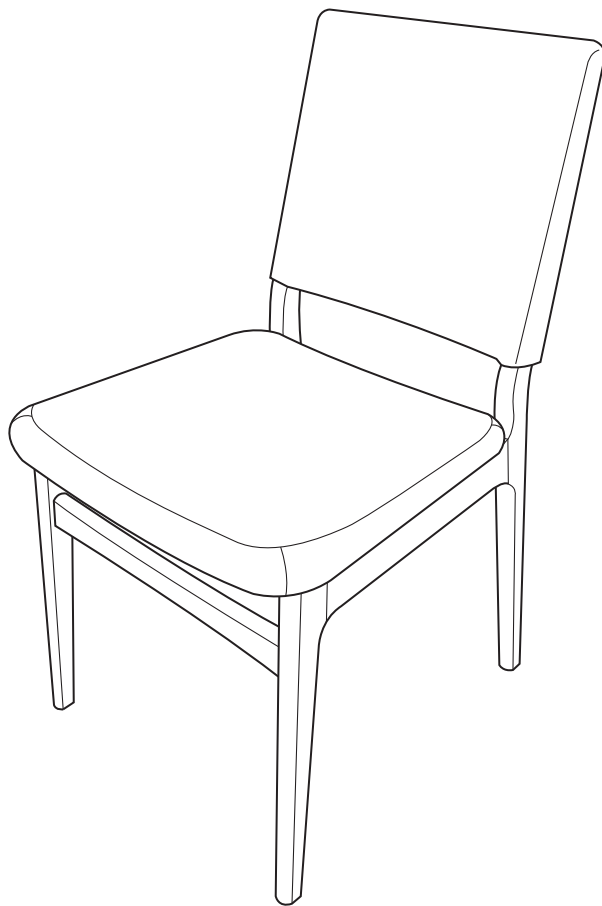


ROWICO



H O M E

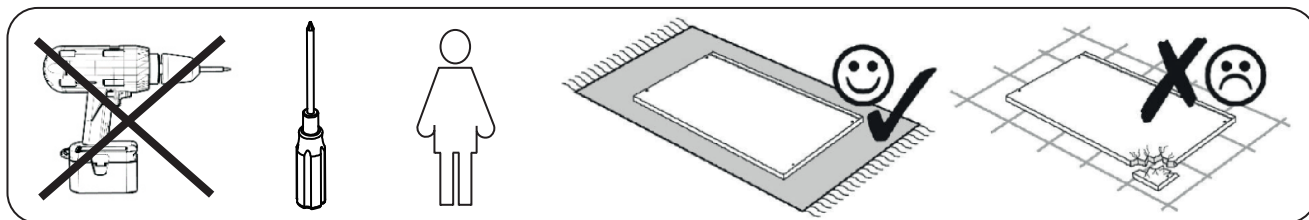


Ax1 	Gx4  30x17mm
Bx1 	Hx4  M6x40mm
Cx1 	Ix4  M5x50mm
Dx1 	Jx6  M5x40mm
Ex1 	Kx1  N5
Fx1 	Lx4  20mm

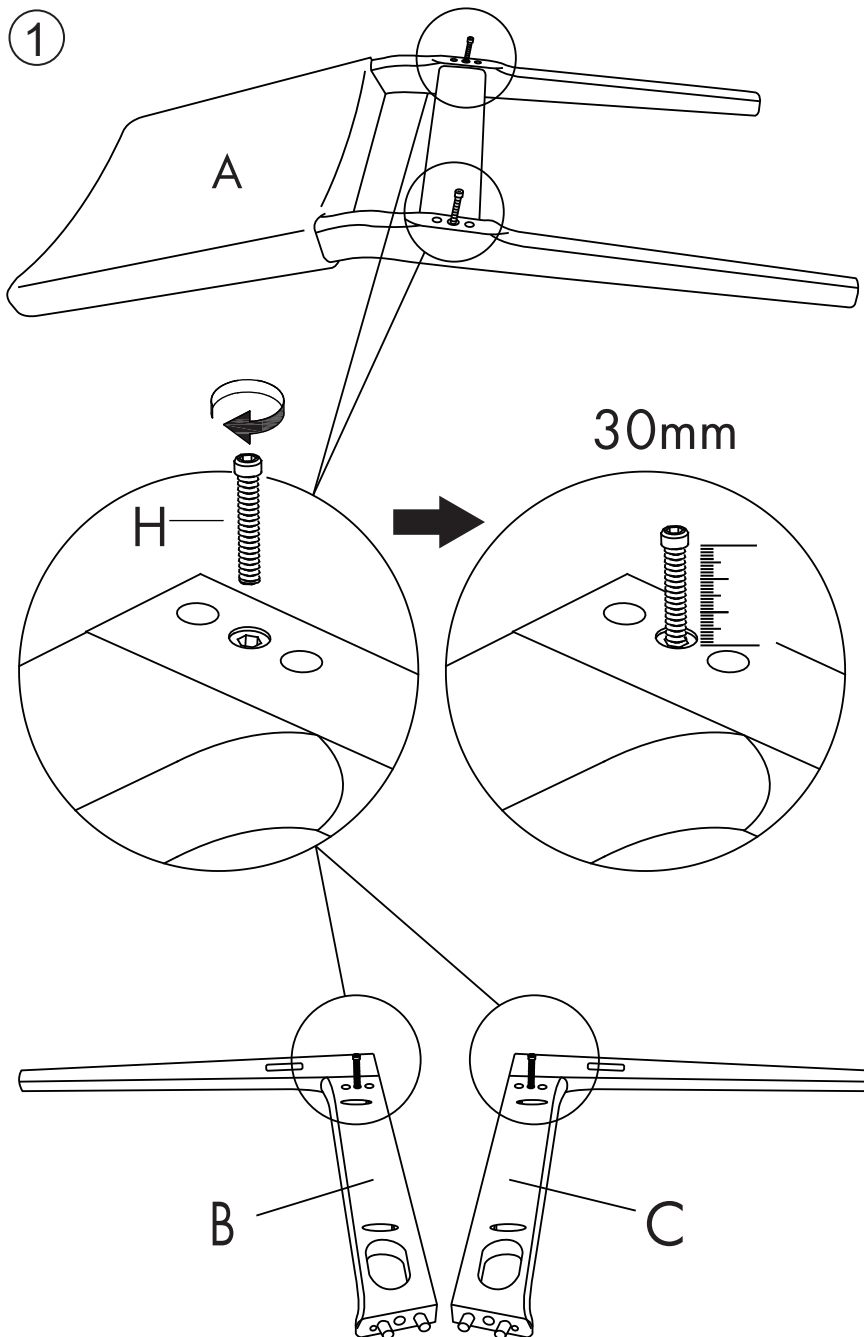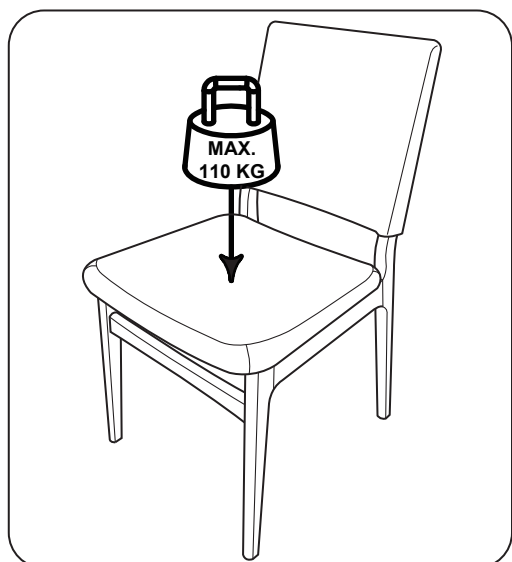


②

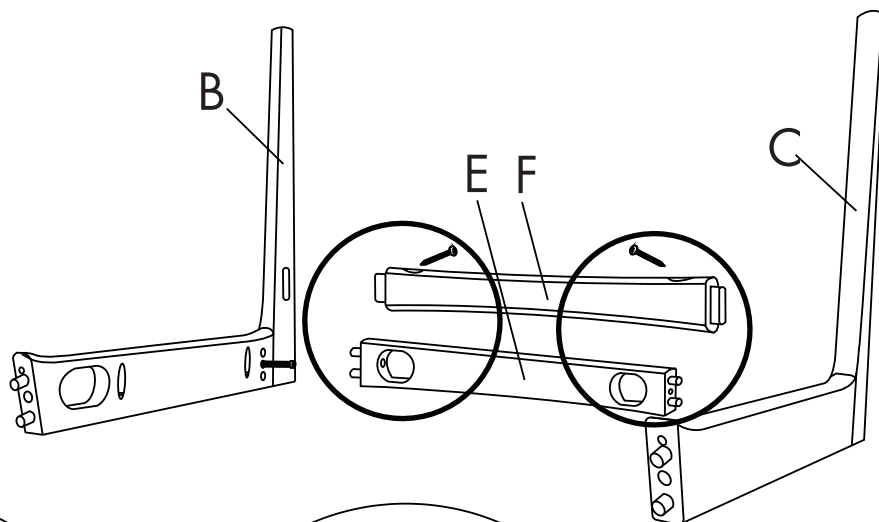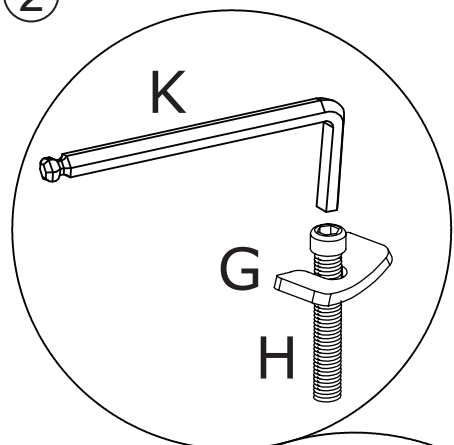



I

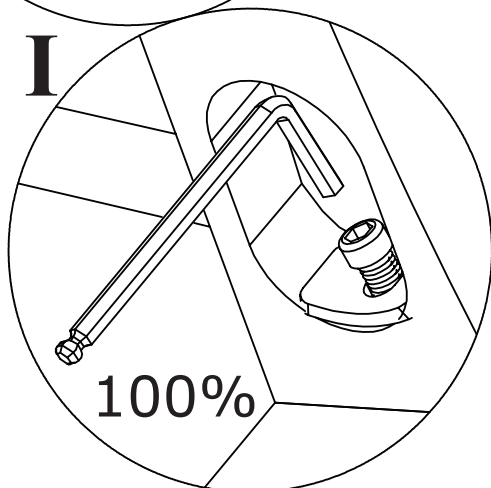



II

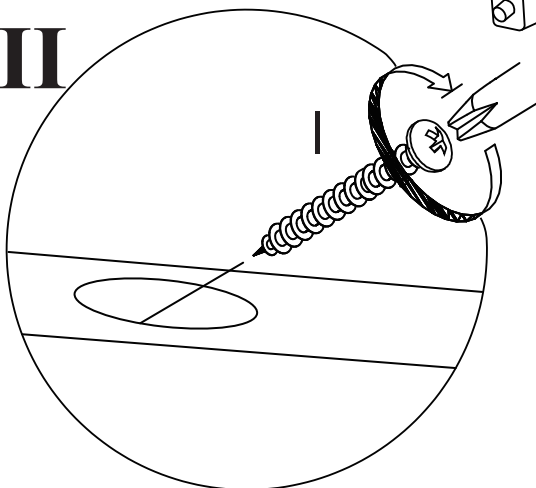


③

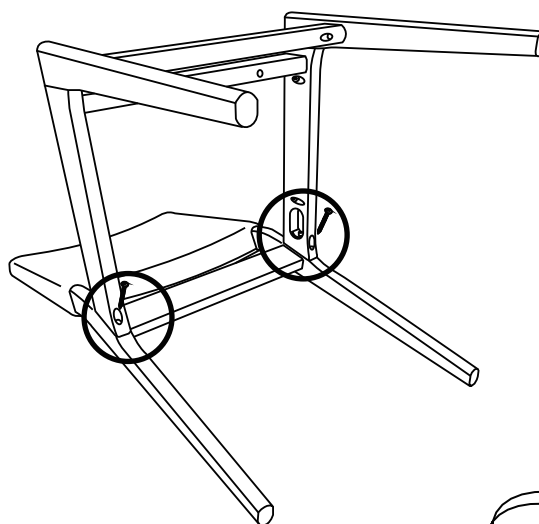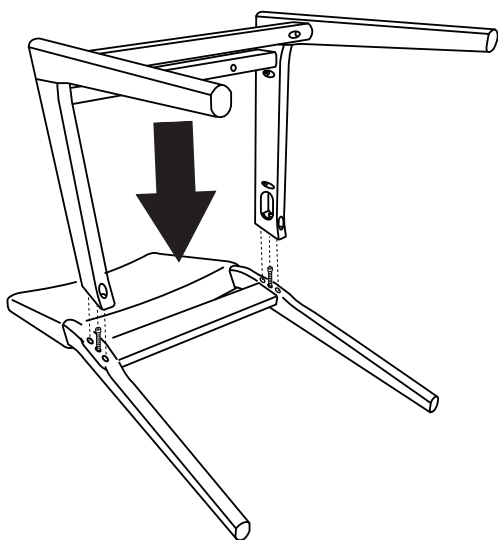

I

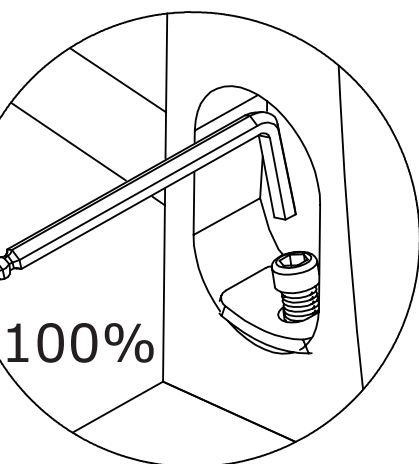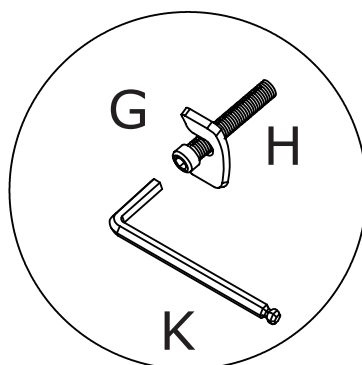

II

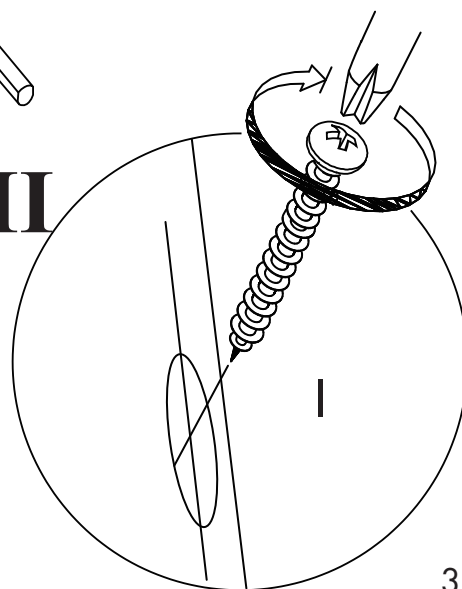


- ④ Placera stolen på ett jämnt underlag.
Belasta stolen med handen, och justera tills alla benen är i nivå med golvet.

Place the chair on a flat surface.
Put a light load on the chair and adjust until all legs are levelling with the floor.

Aseta tuoli tasaiselle pinnalle.
Paina tuolia kevyesti ja säädä, kunnes kaikki jalat ovat samalla tasolla lattian kanssa.

Stellen Sie den Stuhl auf eine ebene Fläche.
Belasten Sie den Stuhl leicht mit der Hand und justieren Sie ihn, bis alle Beine auf gleicher Höhe mit dem Boden sind.

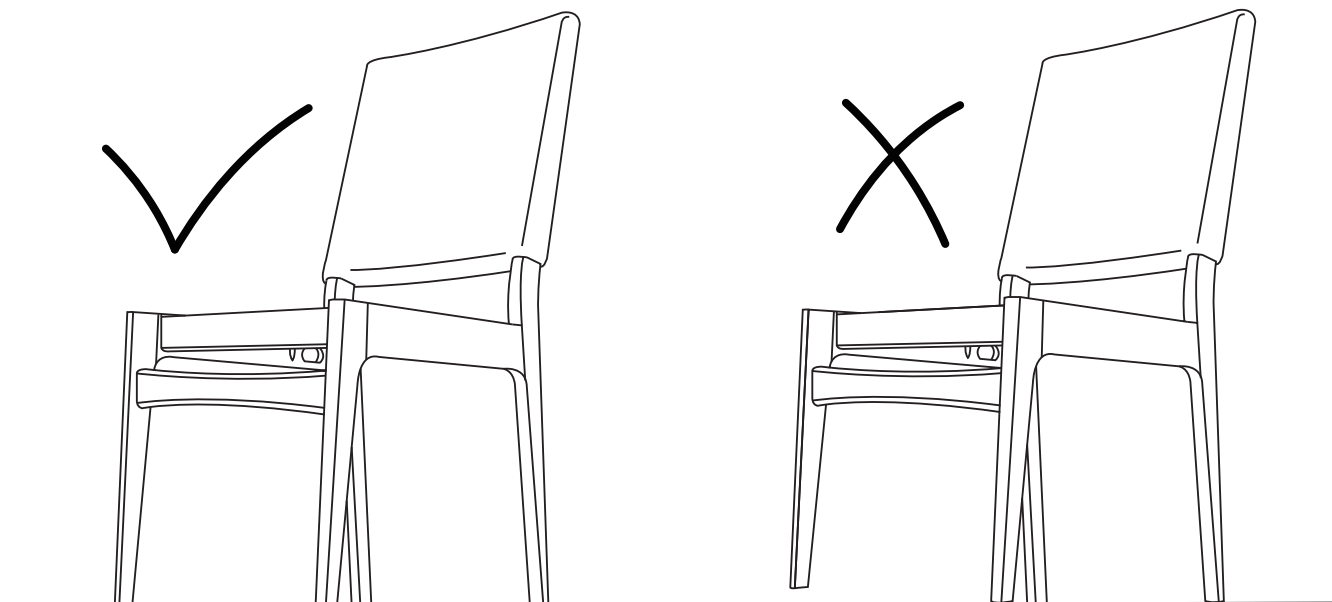

⑤

